


# TD/100 Parts Breakdown

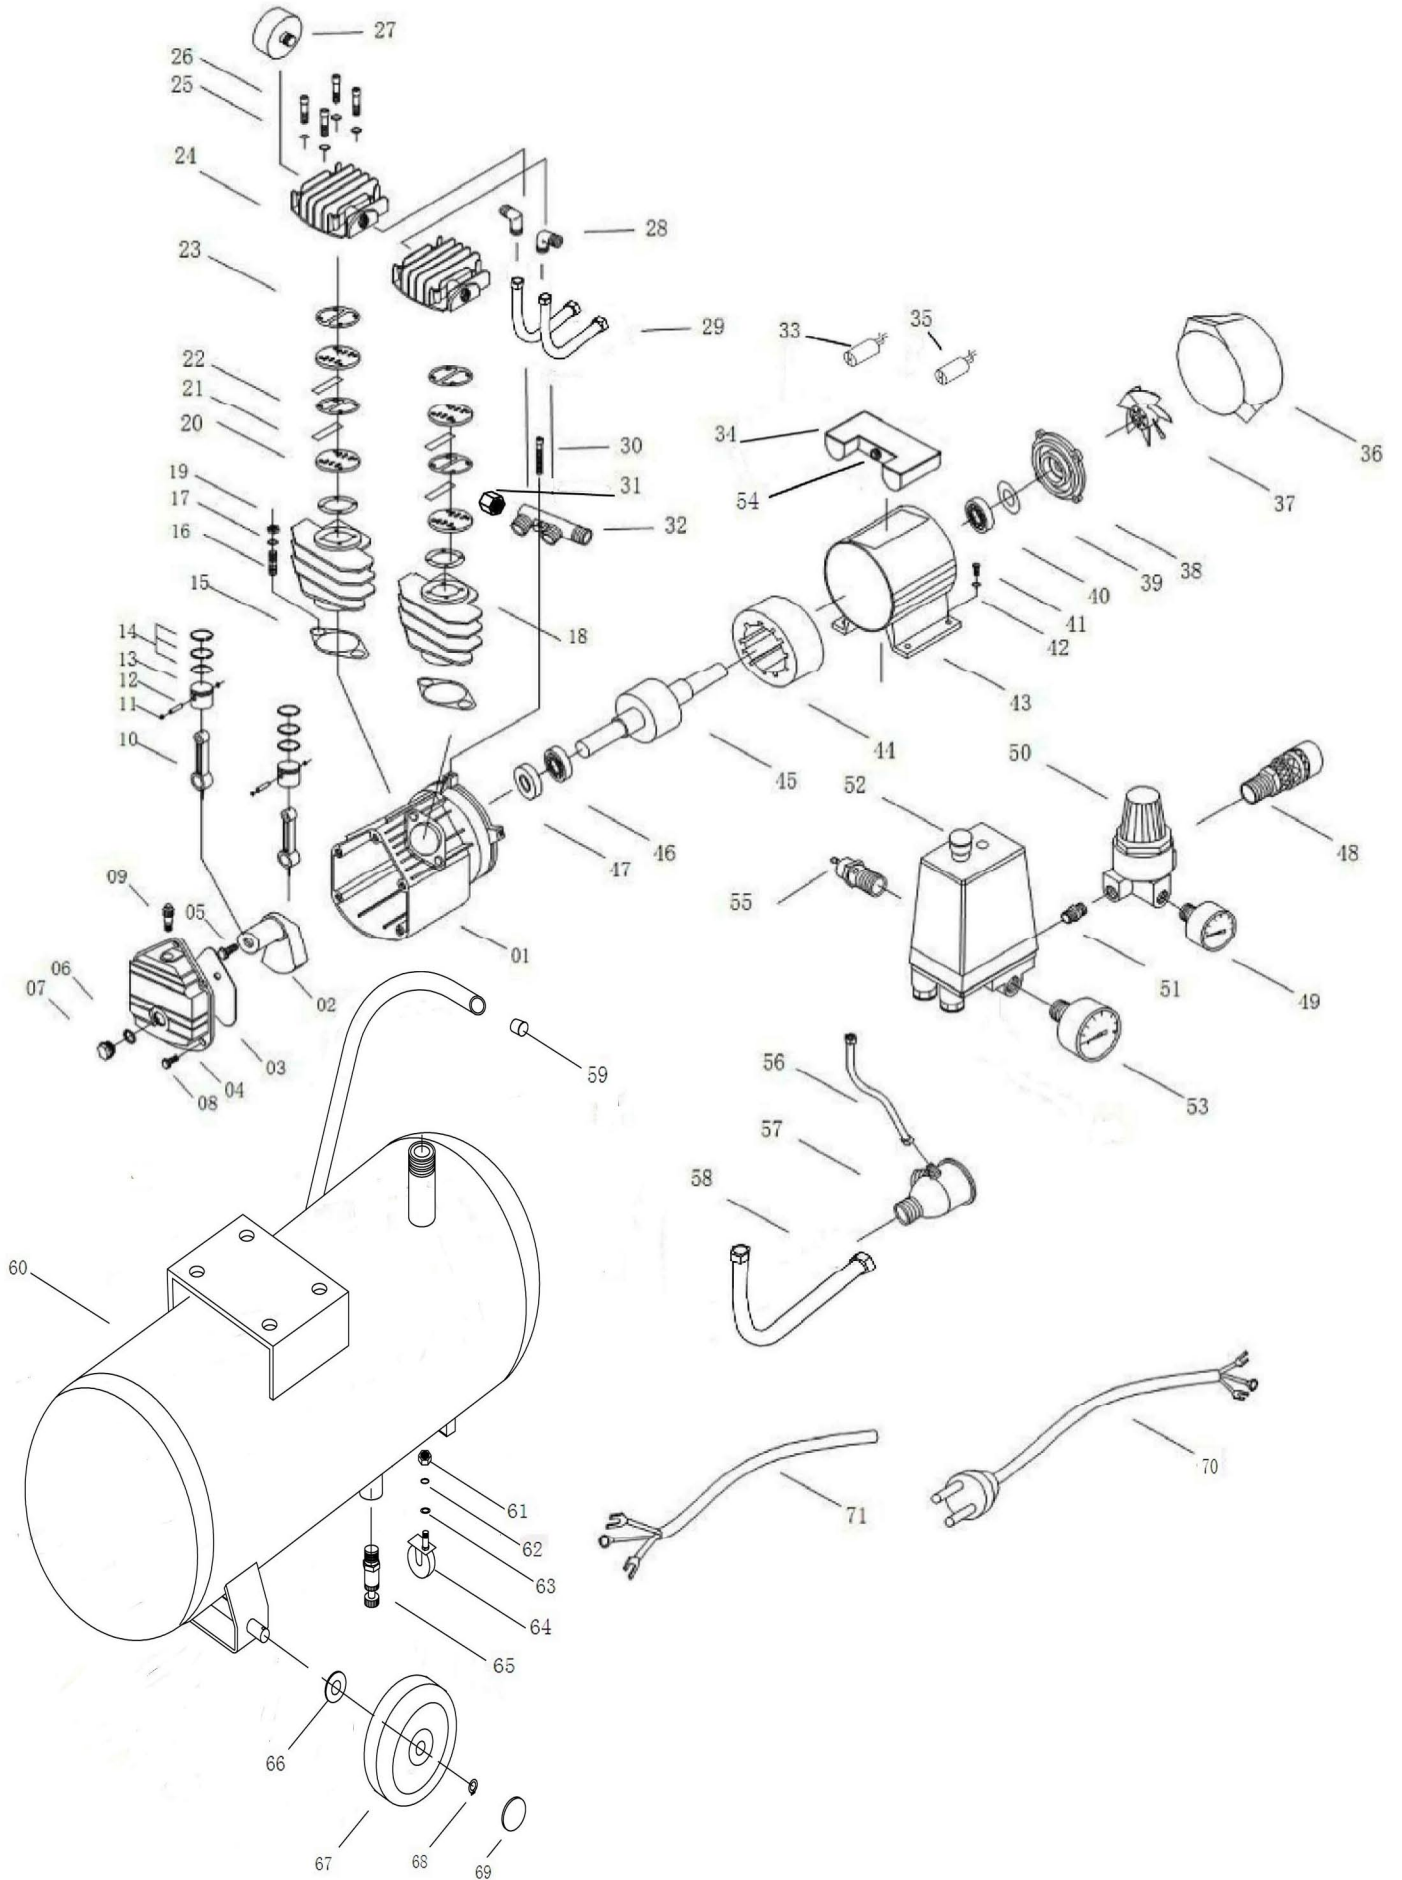

# TD-100 Parts List

REF. #	PART #	DESCRIPTION	REF. #	PART #	DESCRIPTION
1	TD10001	CRANKCASE	41	TD10041	SCREW
2	TD10002	CRANKSHAFT	42	TD10042	SPRING WASHER
3	TD10003	FRONT COVER GASKET	43	TD10043	MOTOR SEAT
4	TD10004	FRONT COVER	44	TD10044	STATOR
5	TD10005	HEX BOLT	45	TD10045	ROTOR
6	TD10006	OIL SIGHTGLASS SEAL	46	TD10046	BALL BEARING
7	TD10007	OIL SIGHTGLASS	47	TD10047	OIL SEAL
8	TD10008	SCREW	48	TD10048	QUICK CONNECTOR
9	TD10009	BREATHER	49	TD10049	PRESSURE GAUGE
10	TD10010	CONNECTING ROD	50	TD10050	REGULATOR
11	TD10011	RETAINING RING	51	TD10051	CONNECTOR
12	TD10012	PISTON PIN	52	TD10052	PRESSURE SWITCH
13	TD10013	PISTON	53	TD10053	PRESSURE GAUGE
14	TD10014	COMPRESSOR RING SET	54	TD10054	OVERLOAD PROTECTOR
15	TD10015	CYLINDER GASKET	55	TD10055	SAFETY VALVE
16	TD10016	STUD BOLT	56	TD10056	TUBE
17	TD10017	SPRING WASHER	57	TD10057	CHECK VALVE
18	TD10018	CYLINDER	58	TD10058	EXHAUSTING PIPE
19	TD10019	NUT	59	TD10059	HANDLE PLUG
20	TD10020	VALVE PLATE GASKET	60	TD10060	TANK
21	TD10021	VALVE PLATE	61	TD10061	NUT
22	TD10022	VALVE REED	62	TD10062	SPRING WASHER
23	TD10023	CYLINDER HEAD GASKET	63	TD10063	FLAT WASHER
24	TD10024	CYLINDER HEAD	64	TD10064	UNIVERSAL WHEEL
25	TD10025	SPRING WASHER	65	TD10065	DRAIN VALVE
26	TD10026	HEX BOLT	66	TD10066	FLAT WASHER
27	TD10027	AIR FILTER	67	TD10067	SNAP RING
28	TD10028	ELBOW	68	TD10068	HEX NUT
29	TD10029	EXHAUSTING PIPE	69	TD10069	WHEEL COVER
30	TD10030	HEX BOLT	70	TD10070	POWER CORD
31	TD10031	UNLOADER VALVE	71	TD10071	MOTOR POWER CORD
32	TD10032	JOINT CONNECTOR			
33	TD10033	STARTING CAPACITOR			
34	TD10034	CAPACITOR HOUSING			
35	TD10035	RUNNING CAPACITOR			
36	TD10036	SHROUD			
37	TD10037	FAN			
38	TD10038	REAR MOTOR COVER			
39	TD10039	GASKET			
40	TD10040	BALL BEARING			